


INSTALLATION MANUAL

**FLOODLIGHT SERIES
 (PCFL 2000DS SYMMETRIC FLOODLIGHT & PCFL 2000DA ASYMMETRIC)**

- 150 SON
- 250 SON
- 400S SON
- 250 M.HALIDE
- 400 M.HALIDE
- 250 MERCURY
- 400 MERCURY


INSTALLATION NOTICE

Warning


- Please follow all the installation manual carefully. Any improper installation will cause burn, electrical shock and lamp malfunction.
- Please do not modify or change the actual part of the lamp
- Please ensure the incoming supply voltage in valid rating.
- If the lamp malfunction, please cut off the supply and call the qualified technician or the related store which sell this product.
- Please do not close this product with sound or heat prove material. 
- Please do not install this product near to the inflammable material.

Notice


- Please do not install this product under direct sun reflected area, enclose with vaporized material & vibrating area.
- Please cut off the supply during the maintenance work.

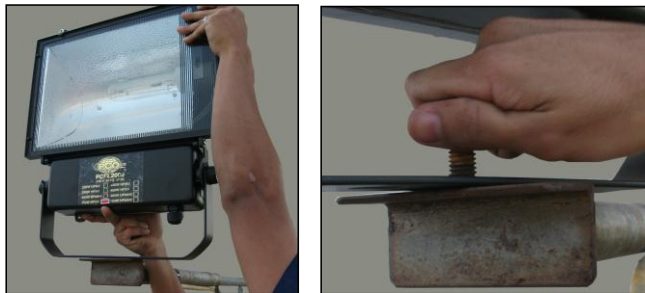


Step 1: Mount the lamp frame on a pole with suitable screw and tight it properly.

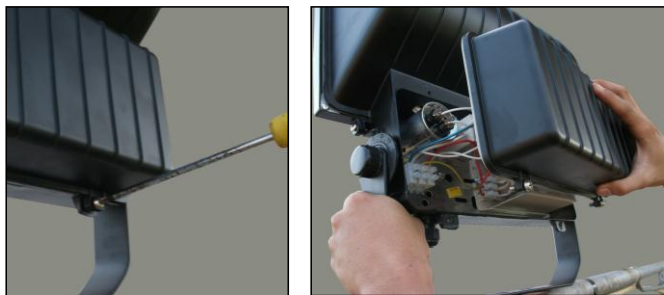


Step 2: Remove the 4 screws from the back of control gear box cover.

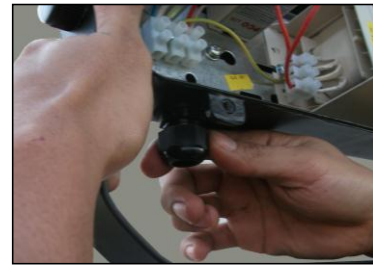


Step 3: Loose the cable gland to insert the supply cable.

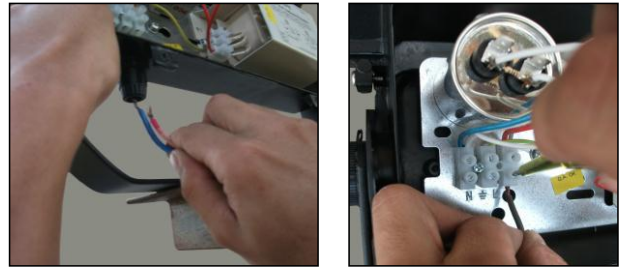

Step 4: Insert the supply cable into lamp frame through the cable gland and connect it to the provided terminal block.

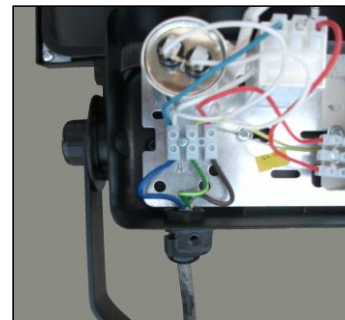

Step 5: Tight the cable gland with proper tool.

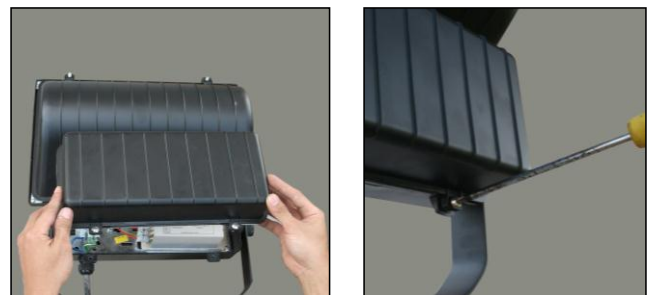

Step 6: Fix back the control gear box cover and screw it.