


**INSTALLATION MANUAL**

**VERTICAL RECESSED ROUND DOWNLIGHT**


- PVRD 801

**INSTALLATION NOTICE**




Warning

- Please follow all the installation manual carefully. Any improper installation will cause burn, electrical shock and lamp malfunction.
- Please do not modify or change the actual part of the lamp
- Please ensure the incoming supply voltage in valid rating.
- If the lamp malfunction, please cut off the supply and call the qualified technician or the related store which sell this product.
- Please do not close this product with sound or heat prove material.
- Please do not install this product near to the inflammable material.



Notice

- Please do not install this product under direct sun reflected area, enclose with vaporized material & vibrating area.
- Please cut off the supply during the maintenance work.

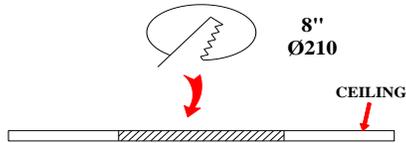

**Step 1:** Prepare hole at the ceiling according to fixture.



**Step 2:** Pull out the reflector from the fixture then remove the holding bracket by unscrew the 2 nylon cap screws.



**Step 3:** Unscrew the screws at the transformer box and open the cover.



**Step 4:** Insert the supply cables into the transformer box then connect it to the provided connector.




**Step 5:** Connect one more cable from the transformer box to connect to the lamp compartment then close back the cover.



**Step 6:** Insert the transformer box into the ceiling and place it properly.



**Step 7:** Open the cover from the lamp compartment and connect the wire from transformer box then close back the cover.

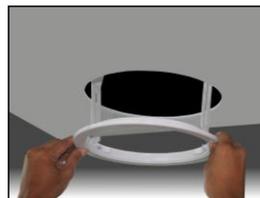

**Step 8:** Insert the fixture into the ceiling and lock it with nylon cap screws.



**Step 9:** Insert the reflector properly into the fixture then install the lamp by screw it until tight.

